


Advanced Features

Quick Guide to the Sekonic L-508


1/2 Step Shutter Speeds

Remove battery compartment cover and set DIP Switch 1 (TIME 0.5) to "ON". Select shutter speed using Set / Change Dial.



Aperture Priority

Set DIP switch 2 (F. NO.) to "ON". Select  and use Set/Change Dial to select aperture.

EV Readout

Set DIP switch 3 (EV) to "ON". Select  Ambient mode. Hold Mode button and turn Set/Change Dial until EV readout shows. Depress measure button.

Multi Flash Mode


Set DIP switch 4 (MULTI) to "ON". Select Cord  or Cordless  Flash mode. Hold down Mode button and turn Set/Change Dial until MLT (Multi) shows on display. Measures and counts up to 9 cumulative flashes.




Exposure Compensation

Depress both ISO and ISO 2 at the same time and turn Set/Change dial to compensation desired up to +/- 9.9 EV.

Motion Picture

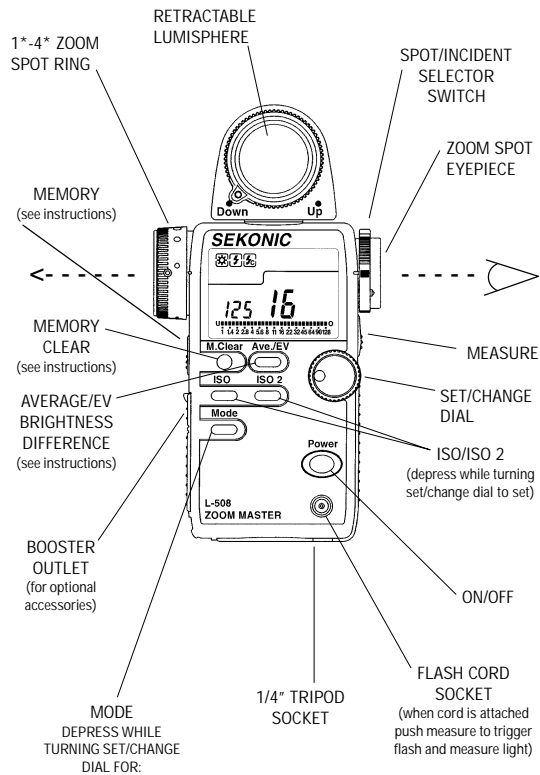Turn Set/change dial (shutter speed) past 8000 to show f/s (frames per second). Select desired f/s and depress measure button. Use EV readout to convert EV to Lux or FC with reference charts.



-  DAYLIGHT MODE
-  FLASH W/CORD
-  AUTO RESET CORDLESS FLASH

Basic Operation - Sekonic L-508


On/Off

Press Power button.  Icon monitors battery level.


Set ISO or ISO 2

Hold down ISO or ISO 2 button while turning the Set/Change dial. Measurements are calculated for main ISO. Take measurement and hold down ISO 2 button to display exposures converted to ISO 2 setting for Polaroid or other films.

Use as Zoom Spot meter

Turn Spot / Incident Selector Switch to  to select Spot. Turn 1° to 4° zoom spot ring to select measuring angle.


Use as Incident meter

Turn Spot / Incident Selector Switch to  to select Incident. Turn collar around Lumisphere to "Up" position.


Measure Brightness / Contrast Difference

Select Incident operation. Turn collar around Lumisphere to "Down" position.


Ambient Reading

Select  Ambient mode by holding down Mode button and turning Set / Change Dial. Depress measure button. Turn Set / Change Dial to select alternate shutter / aperture settings.

Cord Flash Reading

Select  Cord Flash mode. Insert flash cord, depress measure button.

Auto-Reset Cordless Flash Reading

Select  Cordless flash mode. Depress measure button, manually trigger flash.

Advanced Features

Memory Function


Take measurement, depress Memory button. Up to 3 readings can be stored and displayed on the analog memory scale. A fourth measurement can also be displayed.

Averaging Function

After two or three measurements are memorized, depress Ave./EV button. Averaged exposure will be displayed in digital and analog readouts. Operates in spot or incident.

Brightness Difference Function

Using Incident operation, with Lumisphere "Down," after one measurement is memorized, press the Ave./EV button until the EV A displays. Depress and hold down the Measure button. The difference between the last memorized reading or averaged reading and new area measured is displayed in +/- EV in 1/10 steps.

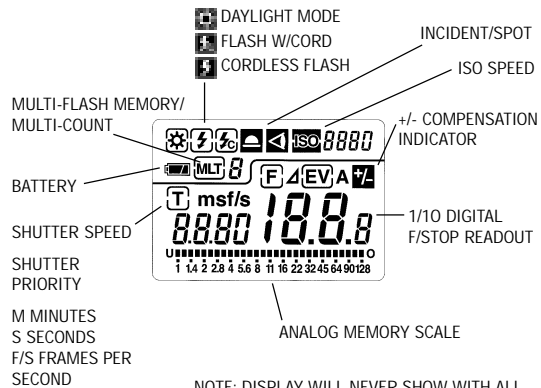

NOTE: DISPLAY WILL NEVER SHOW WITH ALL ICONS DISPLAYED - FOR ILLUSTRATION ONLY