

- For Customers who install Data Transfer Software (Ver.3.08) for Macintosh.  
In case that your Macintosh computer already has the old version of Data Transfer Software (**version3.04 and earlier**), please uninstall it first before installing Data Transfer Software ver. 3.08.
- In case that your Macintosh computer has the Data Transfer Software **version 3.05, 3.06 or 3.07**, please upgrade it to ver. 3.08 by using the function of “UPDATE” in the Data Transfer Software. (***No need to follow the procedure hereunder.***)
- Preparation  
Download the Data Transfer Software Ver.3.08 for Macintosh from website of <http://www.sekonic.com/Support/Downloads/DTSSoftwareforMACandWindows.aspx>

### Uninstalling the software


Uninstallation procedure is different between Mac OS X 10.5 and 10.6 & 10.7. Please follow the instruction below.

#### For Mac OSX 10.5


1. Quit all applications that are currently running on your computer.
2. Open "Macintosh HD" and then double-click the "Applications" folder.
3. Select the “SEKONIC” folder, double click on the “SEKONIC Lightmeter Uninstaller app” and start USB driver uninstall.



4. You are now ready to uninstall Data Transfer Software. To continue, click the [Uninstall] button.

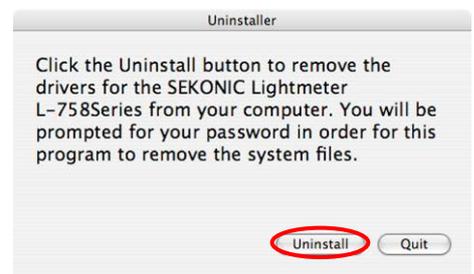

5. The uninstallation confirmation screen is displayed. To continue, click the [OK] button.

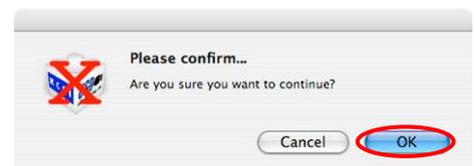

6. Authentication is run. Make entries in “Name” and “Password” and click the [OK] button.



7. Uninstallation is now complete. Click the [OK] button.



8. Now delete the application. Select the "SEKONIC" folder in the "Application Folder" and drag-and-drop it in the Recycle Bin (Trash) to delete it.



### For Mac OSX 10.6 and 10.7


1. Quit all applications that are currently running on your computer.
2. Open "Macintosh HD" and then double-click the "Applications" folder.
3. Select the "SEKONIC" folder, double click on the "SEKONIC\_Lightmeter\_Uninstaller(MACOS10.6\_10.7).pkg" and start USB driver uninstall.




4. Click the [Continue] button.



5. Select a Destination, and click the [Continue] button.

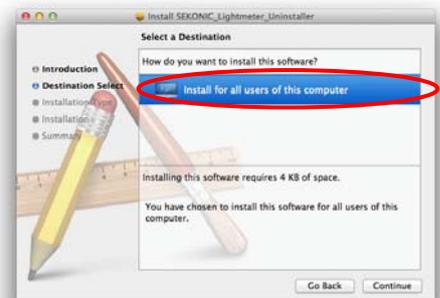

6. You are now ready to install *Data Transfer Software*.  
To continue, click the [Install] button.

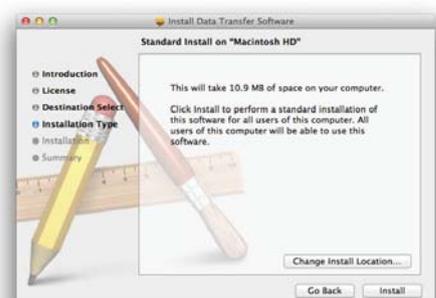


10. Authentication is run.  
Make entries in “Name” and “Password” and click the [Install Software] button.



11. Next , uninstall the USB driver.  
To continue installing, click the [Continue Installation] button.



12. Uninstallation is now complete. You must restart your computer after the installation, so click the [Restart] button.  
The computer restarts.

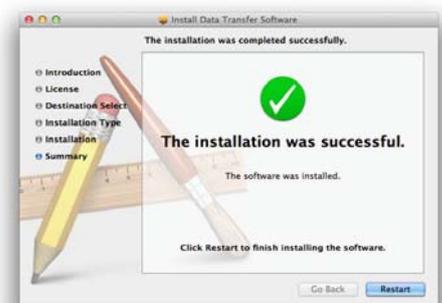

13. Now delete the application. Select the “SEKONIC” folder in the “Application Folder” and drag-and-drop it in the Recycle Bin (Trash) to delete it.



## Installing the software

1. Restart Macintosh computer
2. Double-click the ZIP file of Data Transfer Software ver. 3.08 for Mac to unzip.
3. Open the folder which is applied to the OS version to install in CD-ROM.




4. To start the installation, double-click the "Data Transfer Software(3.0). pkg" icon.



5. Click the [Continue] button.



6. The license agreement is displayed. Select [English], read the agreement, and then click the [Continue] button.

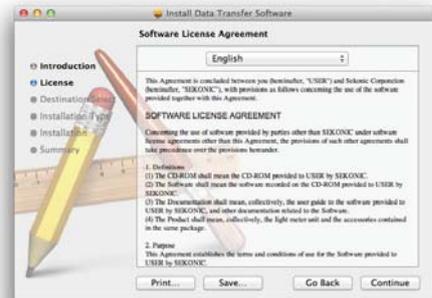

### ◆ NOTE!

- If you select a language that differs from that of the OS on your computer, *Data Transfer Software* can be installed, but corrupted characters may be displayed. If you accidentally install the wrong language version of *Data Transfer Software*, first uninstall it, and then re-install the correct language version. For information about uninstalling the software, see "Uninstalling the software".

7. After reading the license agreement, click the [Agree] button if you agree to its terms and conditions.

To continue installing the software, you must agree to the terms of the software license agreement.

Click Agree to continue or click Disagree to cancel the installation.

8. Confirm that the installation folder volume is correct, and then click the [Continue] button.  
If you want to install in a different [folder], click the [Select] button and then select the folder you want.



9. You are now ready to install *Data Transfer Software*.  
To continue, click the [Install] button.



10. Authentication is run.  
Make entries in "Name" and "Password" and click the [Install Software] button.



11. Next , install the USB driver.  
To continue installing, click the [Continue] button.



12. Installation is now complete. You must restart your computer after the installation, so click the [Restart] button.  
The computer restarts.

